

REMOVAL FROM STORAGE

1. Uncover and clean the motorcycle.
2. Change the engine oil if more than 4 months have passed since the start of storage.
3. Fill the fuel tank with fresh petrol.
4. Perform all Pre-ride Inspection checks (page 32).
5. Test ride the motorcycle at low speeds in a safe riding area away from traffic.