


Engine Oil

Engine Oil Level Check

Check the engine oil level each day before operating the motorcycle.

The oil filler cap/dipstick (1) is at the rear of the right crankcase cover and contains a dipstick for measuring the oil level. Oil level must be maintained between the upper (2) and lower (3) level marks on the oil filler cap/dipstick (1).

1. Hold the motorcycle upright on firm level ground.
2. Start the engine and let it idle for 3 – 5 minutes.

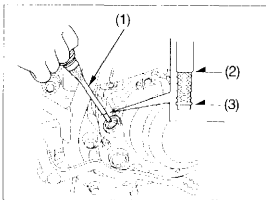

- (1) Oil filler cap/dipstick
- (2) Upper level mark
- (3) Lower level mark

3. Stop the engine. After 2 – 3 minutes, remove the oil filler cap/dipstick (1), wipe it clean, and reinsert the oil filler cap/dipstick without screwing it in. Remove the oil filler cap/dipstick. The oil level should be between the upper (2) and lower (3) level marks on the oil filler cap/dipstick.
4. If required, add the specified oil (see page 44) up to the upper level mark. Do not overfill.
5. Reinstall the oil filler cap/dipstick. Check for oil leaks.

NOTICE

Running the engine with insufficient oil can cause serious engine damage.