


# Starting & Stopping the Engine

---

## How to Stop the Engine

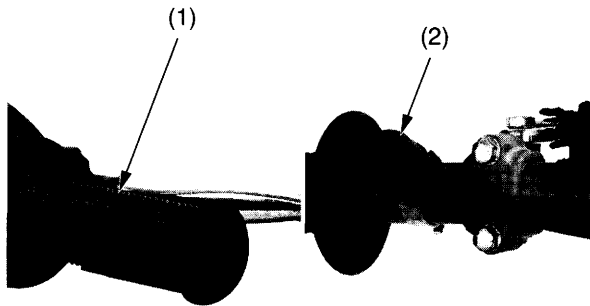

(1) throttle grip

(2) engine stop button

### Normal Engine Stop

1. Shift the transmission into neutral.
2. Turn the fuel valve OFF.
3. Lightly open the throttle grip (1) two or three times, and then close it.
4. Depress and hold the engine stop button (2) until the engine stops completely.

Failure to close the fuel valve may cause the carburetor to overflow, result in hard starting.

### Emergency Engine Stop

To stop the engine in an emergency, depress the engine stop button.