


Piston/Piston Rings/Piston Pin

Piston/Piston Pin/ Piston Ring Inspection

We recommend you consult the Shop Manual or your Honda dealer for correct Service Limit measurements.

Piston Ring Installation

1. Remove the carbon deposits from the piston head and piston ring grooves with the removed ring (1).

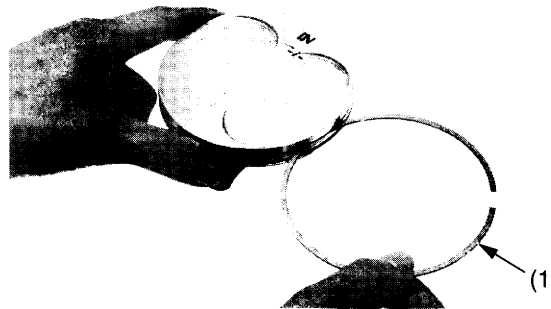

(1) removed ring

2. Apply engine oil to each piston ring whole surface and install them to the piston.

NOTICE

*Do not damage the piston ring by spreading the ends too far.
Do not damage the piston during piston ring installation.*

- To install the oil ring, install the spacer first, then install the side rails.
 - Install the top ring on the piston with the marking side facing up.
3. After installing the rings they should rotate freely, without sticking. Space the ring end gaps 180 degrees apart between top ring and upper side rail. Space the ring end gaps 90 degrees apart between upper side rail, spacer and lower side rail.

