

Crankcase Breather


Refer to *Safety Precautions* on page 27.

Service more frequently if your CRF is ridden in the rain or often at full throttle.

Service the breather if you can see deposits in the transparent section of the drain tube.

Draining

1. Remove the crankcase breather tube plug (1) from the crankcase breather tube (2) and drain deposits into a suitable container.
2. Reinstall the crankcase breather tube plug.

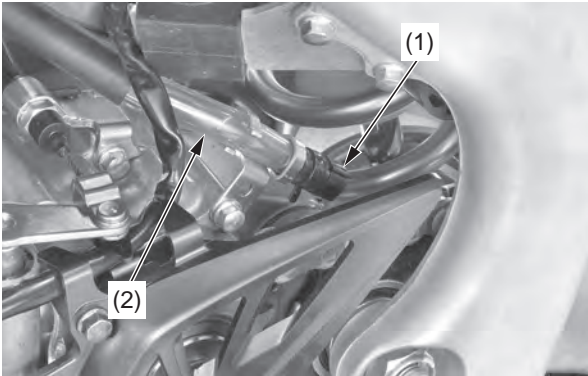

- (1) crankcase breather tube plug
(2) crankcase breather tube