


Exhaust Pipe/Muffler

Exhaust Pipe Removal


1. Remove the muffler (page 62).
2. Remove the exhaust pipe joint nuts (1), exhaust pipe (2) and old exhaust pipe gasket (3).

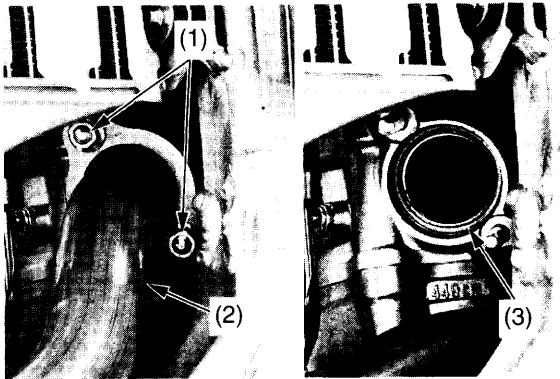

- (1) exhaust pipe joint nuts
(2) exhaust pipe
(3) old exhaust pipe gasket

Exhaust Pipe Installation

1. Install a new exhaust pipe gasket (1) as shown.
2. Install the exhaust pipe (2) and exhaust pipe joint nuts (3).

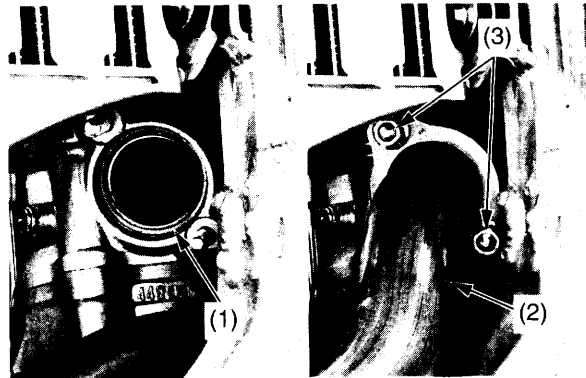

- (1) new exhaust pipe gasket
(2) exhaust pipe
(3) exhaust pipe joint nuts

3. Install the muffler (page 63) but do not tighten the bolts yet.
4. Tighten the exhaust pipe joint nuts to the specified torque:
15 lbf·ft (21 N·m, 2.1 kgf·m)
5. Tighten the muffler clamp bolt, front muffler mounting bolt and rear muffler mounting bolt (page 63).
6. Installation can be done in the reverse order of removal.