


# Seat Removal

Refer to *Safety Precautions* on page 45 .

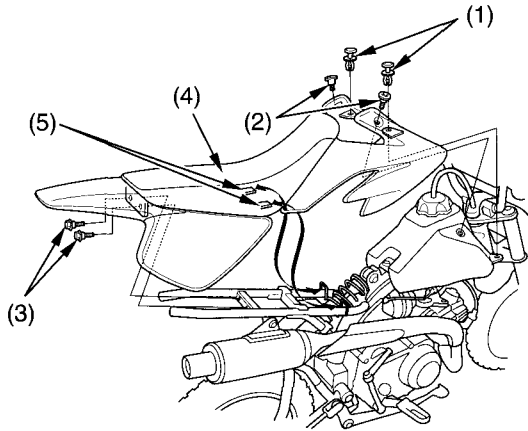

(1) clips  
(2) screws

(3) bolts  
(4) seat  
(5) prongs

## Removal

1. Remove the clips ( 1 ) and screws ( 2 ) on the fuel tank shroud.
2. Remove the bolts ( 3 ) under the rear fender.
3. Slide the seat ( 4 ) with fuel tank shroud and rear cowl back.

## Installation

1. Position the prongs ( 5 ) under the seat into the spaces for them in the frame.
2. Install the bolts and screws and tighten them, then install the clips.