


# Brakes

## RIGHT REAR

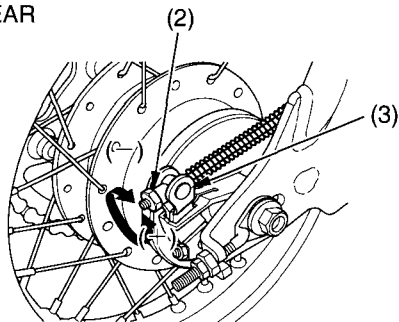

- (2) adjusting nut                      (+) increase freeplay  
(3) brake arm pin                      (-) decrease freeplay


### Adjustment

1. Turn the rear brake adjusting nut (2). Make sure the cut-out on the adjusting nut is seated on the brake arm pin (3).
2. Apply the brake, release it, and then spin the wheel and check that it rotates freely. Repeat this procedure several times.
3. Check the freeplay. If you can't adjust the freeplay properly, see your Honda dealer.

## Brake Shoe Wear

The front and rear brakes are equipped with external brake wear indicators that let you check brake wear without disassembly. Application of the brake control (lever or pedal) causes the arrow on the brake arm to move toward a reference mark on the brake panel.

## LEFT FRONT

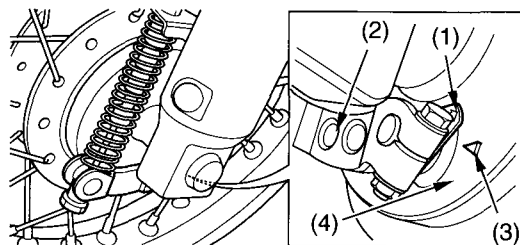

- (1) arrow                                      (3) reference mark  
(2) brake arm                                (4) brake panel