

MAJOR COMPONENTS

(Information you need to operate this motorcycle)

BRAKES

Front Brake

Brakes are items of personal safety and should always be maintained in proper adjustment.

The distance the front brake lever or rear brake pedal moves before the brake starts to engage is called freeplay.


Measured at the tip of the front brake lever (1), freeplay should be maintained at:

10–20 mm (0.4–0.8 in)


Adjust the freeplay of the brake lever with the front wheel pointed straight ahead.

Adjustment:

1. Adjust by turning the front brake adjusting nut (2) a half-turn at a time. Make sure the cut-out on the adjusting nut is seated on the brake arm pin (3). Check the adjustment.

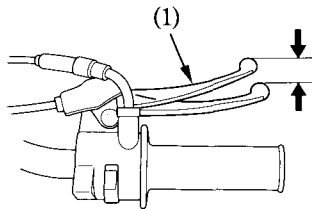

(1) Front brake lever

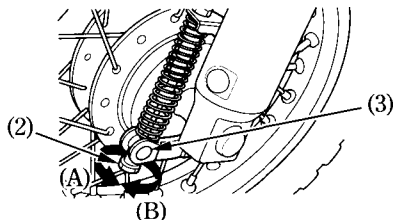

(2) Front brake
adjusting nut
(3) Brake arm pin

(A) Decrease freeplay
(B) Increase freeplay