


# Seat Removal

Refer to *Safety Precautions* on page 43 .

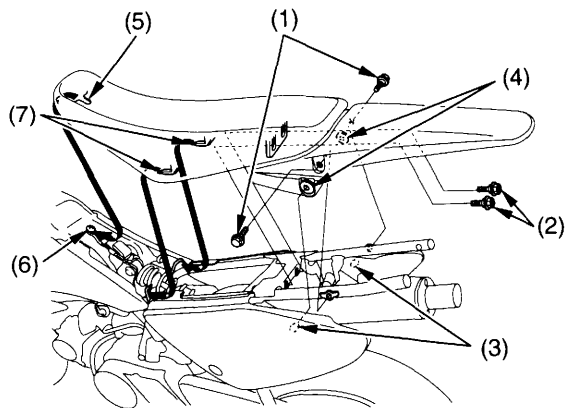

- |                       |                    |
|-----------------------|--------------------|
| (1) bolts A           | (5) slot           |
| (2) bolts B           | (6) fuel tank bolt |
| (3) side cover prongs | (7) seat prongs    |
| (4) rubber grommets   |                    |

## Removal

1. Remove the bolts A ( 1 ) on each side of the rear fender.
2. Remove the bolts B ( 2 ) under the rear fender.
3. Pull both side cover prongs ( 3 ) out of the rubber grommets ( 4 ).
4. Slide the seat and rear fender back.

## Installation

1. Align the slot ( 5 ) on the front of the seat with the bolt ( 6 ) on the rear of the fuel tank – and insert the seat prongs ( 7 ) under the seat into the spaces for them in the frame.
2. Align the side cover prongs with the rubber grommets. Press the side cover into position.
3. Install the bolts and tighten them.