


## ENGINE STOP SWITCH

The engine stop switch (1) is next to the left handlebar grip. When the switch is in the ○ (RUN) position, the engine will operate. When the switch is in the ☒ (OFF) position, the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in the ○ (RUN) position.

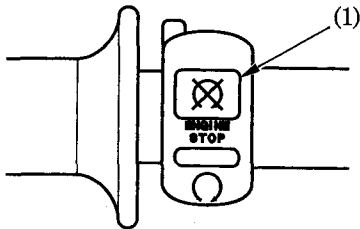

(1) Engine stop switch