


## Rear Wheel Removal


1. Raise the rear wheel off the ground by placing a support block under the engine.
2. Unscrew the rear brake adjuster (1).
3. Press and release the rear brake pedal and disconnect the brake rod (2) from the brake arm (3).
4. Loosen the adjusting nut (4) on the chain adjuster on both sides.

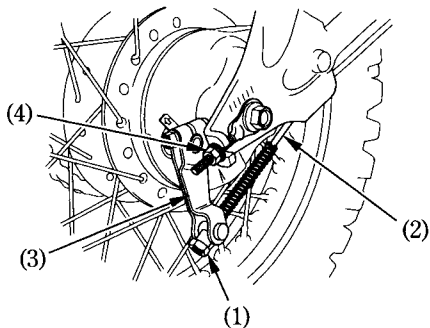

- (1) Brake adjuster  
(2) Brake rod

- (3) Brake arm  
(4) Adjusting nut

5. Unscrew the axle nut (5) and pull out the axle. Push the wheel forward and derail the drive chain from the rear sprocket. Tilt the motorcycle to one side so that the wheel can be removed.

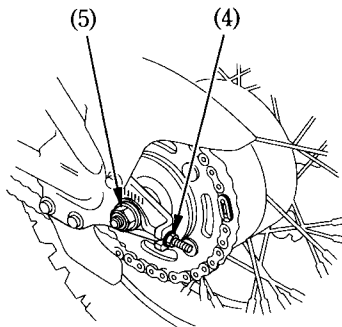

- (5) Axle nut