

Transmission Oil

Temperature and Viscosity

Choose the Transmission oil corresponding to the atmospheric temperature in your riding area.

Oil change intervals.

Initial: 1,000km

After the first change:

Every 6000km

Contact an Authorized Honda Dealer for the oil change.

