

Adding Coolant

1. To top-up the reservoir, you must first remove the seat and left hand side cover. (refer page 22)
2. Remove filler cap and fill reservoir with Honda Ultra coolant to level indicated on reservoir.
3. If level drops significantly, it may mean there is a leak in the cooling system.

Contact an authorised dealer for technical support.



Advice

Use of poor quality water or radiator fluid other than the recommended type will cause corrosion / electrolysis.

