

Clutch

< Free play in the clutch lever >

Squeeze the clutch lever until resistance is felt. Measure the distance traveled at the tip of the clutch lever with a ruler.

Free play: 10 ~ 20mm

Adjust the free play if necessary (p.62).

