

Fuses and Relays

Fuses and Relays

1. Remove the headlight and shroud
2. Open the fuse holder.
3. Locate the blown fuse.
4. Replace with another of equivalent amperage.
5. Close the fuse holder and install the headlight.

Relays

Follow procedure above and identify relays from the wiring diagram in Service Manual.

