

## Tyres

Tyres should be kept in good condition and maintained at the rated pressure at all times. Worn tyres should be replaced immediately.



### **Caution**

Use of worn tyres or failure to maintain tyres at the correct pressure can cause an accident resulting in serious injury or death.


Always maintain tyres at the correct pressure given in this owner's manual, and replace worn tyres immediately.

### < Air pressure >

Check the air pressure while the tyres are cold.

### < Tread >

Tyres should be replaced as soon as wear indicators start to appear on the tyre wall, or when the tread on the centre of the tyre reaches the level shown below.

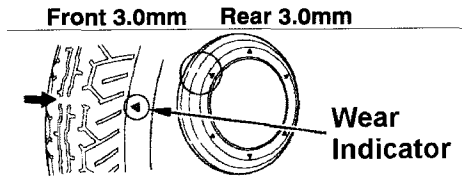

Without pillion  
passenger

Front

1.50kgf/cm<sup>2</sup>

Rear

1.50kgf/cm<sup>2</sup>

With pillion  
passenger

Front

1.50kgf/cm<sup>2</sup>

Rear

1.50kgf/cm<sup>2</sup>