

RIGHT SIDE COVER


The right side cover must be removed for battery and fuse maintenance.

Right side cover removal:

1. Remove the screw (1).
2. Pull the top of the right side cover (2).
3. Remove the right side cover.

Right side cover installation:

- Install the removed parts in the reverse order of removal.

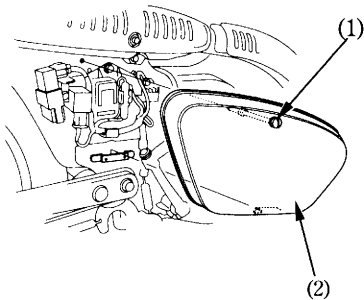

- (1) Screw
(2) Right side cover