

## FUSE REPLACEMENT

(Refer to the maintenance precautions on page 45).

The fuse holder (1) is attached to the battery case cover.

The specified fuse are follows:

7A (UY type)

10A (UB,NZ type)

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your Honda dealer for repair.


### CAUTION:

- \* Turn the ignition switch OFF before checking or replacing fuse to prevent accidental short-circuiting.
- \* Do not pry the clips open to get a fuse out; you could bend them and cause poor contact with the new fuse. A loose fuse could cause damage to the electrical system and even start a fire.

### ▲WARNING

- \* Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.

(UY type)

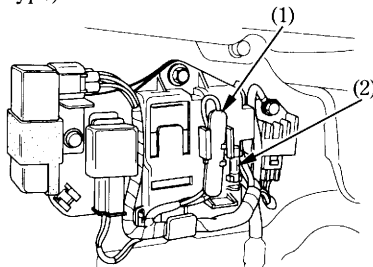

- (1) Fuse holder  
(2) Spare fuse