


Adjustment:

1. Loosen the lock nut (1) and turn the adjuster (2). Tighten the lock nut and check the adjustment.
2. If the adjuster is threaded out near its limit or if the correct free play cannot be obtained, loosen the lock nut and turn in the cable adjuster completely. Tighten the lock nut.

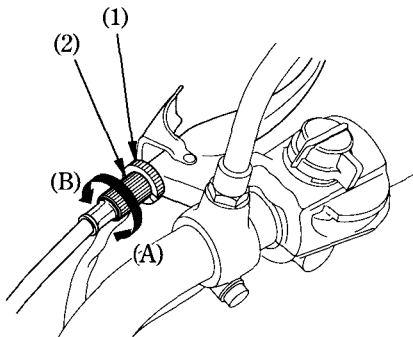

- (1) Lock nut
- (2) Brake cable adjuster
- (A) Increase free play
- (B) Decrease free play