

FEATURES


(Not required for operation)

STEERING LOCK

The steering lock (1) is on the steering stem.

To lock the steering, turn the handlebar all the way to left, insert the key into the lock, turn the key 180° clockwise and remove it.

To unlock the steering, perform the locking sequence in the reverse order.

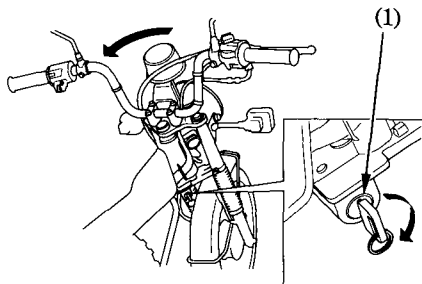

(1) Steering lock