

Installation Notes:


- Reverse the removal procedure.
- Position the front wheel between the fork legs and insert the front axle shaft from the left side, through the left fork leg and wheel hub.
- Make sure that the tang (7) on the left front fork leg is located in the slot (8) in the brake panel.
- Tighten the front axle nut to specified torque.

Front axle nut torque:

59 N·m (6.0 kgf·m , 44 lbf·ft)

- Adjust the brake (page 17 – 18).
- After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

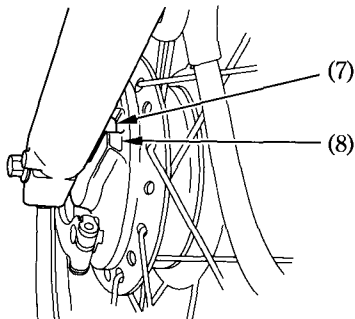

(7) Tang

(8) Slot