MAINTENANCE

| Page | | Page | |
|------|--------------------------------------|-------------------|-----------------------------|
| | AINTENANCE | 66 | Brake Shoe Wear |
| 35 | Maintenance Schedule | 67 | Battery |
| 37 | Tool Kit | 69 | Fuse Replacement |
| 38 | Serial Numbers | 71 | Stoplight Switch Adjustment |
| 39 | Maintenance Precautions | | |
| 40 | Air Cleaner | 72 CLEANING | |
| 42 | Engine Oil | | |
| 46 | Spark Plugs | 73 ST | ORAGE GUIDE |
| 48 | Contact Breaker Point Gap and | 73 | Storage |
| | Ignition timing (SA, D) | 74 | Removal from Storage |
| 50 | Valve Clearance | | |
| 52 | Throttle Operation | 75 SPECIFICATIONS | |
| 54 | Idle Speed | | |
| 55 | Cam Chain Adjustment | 78 N | OISE CONTROL SYSTEM |
| 56 | Drive Chain | (A | USTRALIA ONLY) |
| 61 | Front and Rear Suspension Inspection | | |
| 62 | Side Stand | | |
| 63 | Wheel Removal | | |