

## TYRES

Proper air pressure will provide maximum stability, riding comfort and tyre life.

Check tyre pressure frequently and adjust if necessary.

### NOTE:

- \* Tyre pressure should be checked before you ride while the tyres are "cold".

Select the right replacement tyre in accordance with the following specifications:

Cold tyre pressures kPa (kg/cm <sup>2</sup> , psi)	Front: 175 (1.75, 24) Rear: 225 (2.25, 32)
Tyre size	Front: 2.75-17-4PR Rear: 2.75-17-4PR

Check the tyres for cuts, imbedded nails, or other sharp objects. See your authorized Honda Dealer for replacement of damaged tyres or punctured inner tubes.

### **▲ WARNING**

- \* **Do not attempt to patch a damaged tyre or inner tube. Wheel balance and tyre reliability may be impaired.**
- \* **Improper tyre inflation will cause abnormal tread wear and create a safety hazard. Underinflation may result in the tyre slipping on, or coming off of the rim causing tyre deflation that may result in a loss of vehicle control.**
- \* **Operation with excessively worn tyre is hazardous and will adversely affect traction and handling.**