


ESSENTIAL INDIVIDUAL COMPONENTS

IGNITION SWITCH

The ignition switch (1) is located on the left side of the steering head pipe.

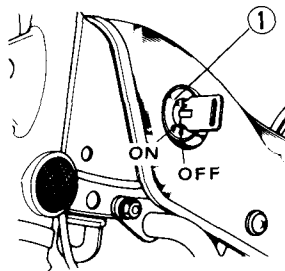

(1) Ignition switch

Key Position	Function	Key Removal
OFF	Engine and lights cannot be operated	Key can be removed
ON	Engine and lights can be operated	Key cannot be removed