


RIGHT HANDELBAR CONTROLS

Engine Stop Switch

The three position engine stop switch (1) is next to the throttle grip. When the switch is in the RUN position, the engine will operate. When the switch is in either OFF position, the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in the RUN position.

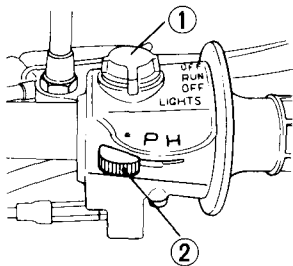

(1) Engine stop switch (2) Headlight switch

Headlight Switch

The headlight switch (2) has three positions, "H", "P" and "OFF" marked by a red dot to the left of "P".

- H: Headlight, taillight, position light and meter lights on.
- P: Position light, taillight and meter lights on.
- OFF (dot): Headlight, taillight, position light and meter lights off.