

- 5. Pull out the screen filter (2) and wash it in clean solvent.
- 6. Separate the clutch outer cover (3) from the clutch outer (4).
- 7. Clean any sludge from the center of the clutch outer (4) with a lint-free cloth.
- 8. Reinstall the component parts.

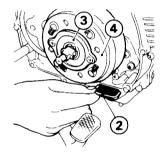

- (2) Screen filter
- (4) Clutch outer
- (3) Outer cover

- 9. Check that the sealing washer on the drain plug is in good condition and install the plug.
- 10. Fill the crankcase with the recommended grade oil; approximately:
  - 1.0 ℓ (1.0 US qt, 0.9 Imp qt)
- 11. Install the oil filler cap/dipstick.

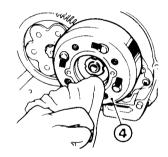

(4) Clutch outer