


■ ELECTRICAL CONTROLS

● IGNITION SWITCH

The ignition switch ① is located on the left side of the main pipe.

Functions of the respective switch positions are shown in the chart below.

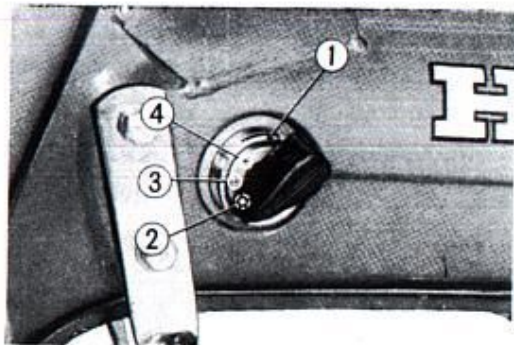

① Ignition switch

Key position	Function	Key removal
② OFF	Electrical circuit is opened, engine will not start	Key can be removed
③	Electrical circuit is closed, engine can be started (for day time operation)	Key can not be removed
④	Electrical circuit is closed, engine can be started (for night time operation)	Key can not be removed