

■ FUEL AND OIL

● FUEL TANK

The fuel tank ① is located under the seat.

The fuel tank capacity is 0.65 U.S. gallons including the 0.5 quarts in the reserve supply. The capacity of the reserve is sufficient to travel approximately 25 miles at moderate speeds.


Note: Premium grade fuel with an octane rating of 85 or above must be used. Do not mix oil with the fuel.

● FUEL TANK CAP

The fuel tank cap ③ has a valve ② with on "ON" and "OFF" position to open or close the tank vent.

The fuel tank valve should be turned to "ON" to allow fuel to flow when running the engine.

Turning the lever to "OFF" will prevent fuel from flowing out the vent hole when transporting the motorcycle.

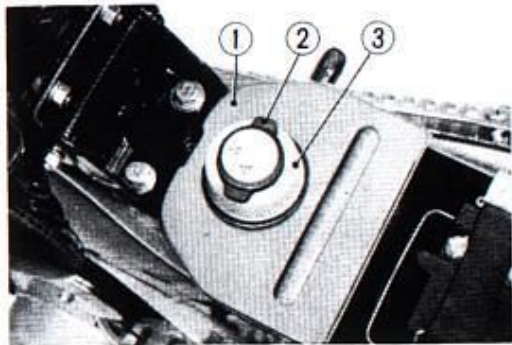

- ① Fuel tank
- ② Fuel tank valve
- ③ Fuel tank cap