


USB Flash Drive

- Use a recommended USB flash drive of 256 MB or higher.
- Some USB flash drives (such as devices with security lockout features, etc.) may not be used or restricted to its function.
- The audio system can play MP3/WMA/AAC/WAV files on a USB flash drive.
- Audio files protected by digital rights management (DRM) are not played.
- The short beep sounds four times, when the audio system reads unplayable files such as audio files protected by digital rights management (DRM).

To connect a USB flash drive P.55

To play a track on a USB flash drive

- 1 Make sure that your USB flash drive is connected to the audio system.
 - ▶ The USB device status icon is displayed when a USB flash drive is connected.
- 2 Select the audio mode 3 or 4 using the **MODE** button.  P.50
A track will be played and the playing status icon will be displayed when the information of the USB flash drive is received.
 - ▶ If it takes a long time before a track starts playing, check the status of USB flash drive.

