


Removing & Installing Body Components

Seat

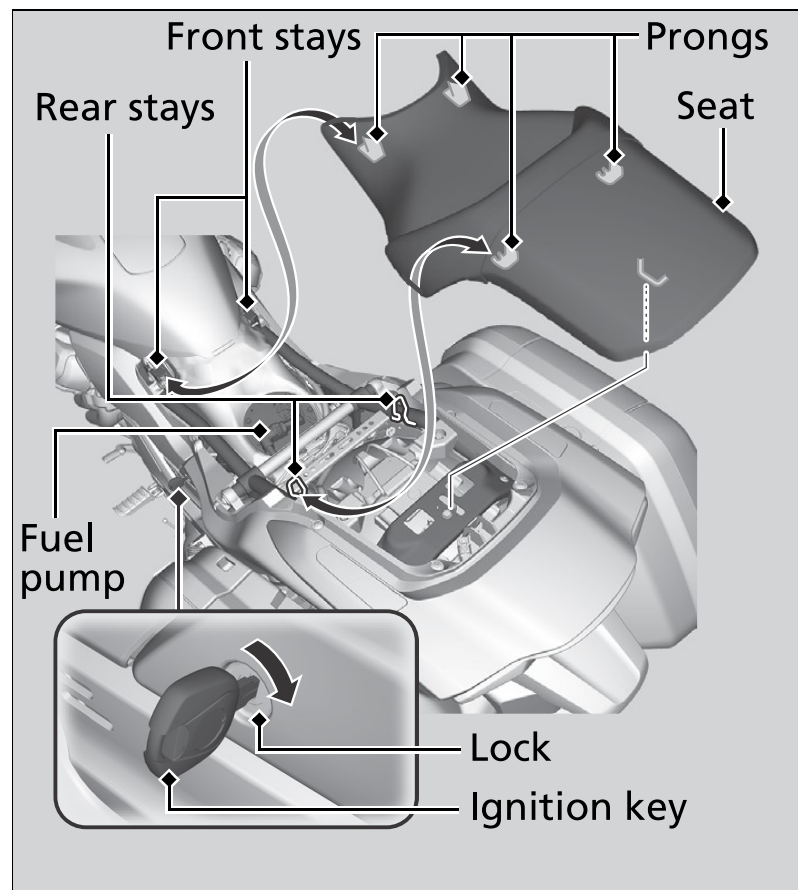

The seat must be removed to access the colour label and accessory socket, to use the

helmet holder, to store a U-shaped lock, and to remove the left side cover.

Removal

1. Insert the ignition key into the lock.
2. Turn the ignition key clockwise and hold it, then pull rear of the seat back and up.

Installation

1. Insert the front and rear prongs into the front and rear stays on the frame.
2. Push forward and down on the rear of the seat until it locks in place.

Make sure that the seat is locked securely in position to pull it up lightly.

The seat locks automatically when installed. Take care not to lock your key in the under seat compartment.

Do not store gloves, towel or other items around the fuel pump. They may cause damage to the fuel pump.