

Troubleshooting

| | |
|--|--------------|
| Engine Will Not Start (HISS indicator stays on) | P. 95 |
| Overheating (High coolant temperature indicator is on)..... | P. 96 |
| Warning Indicators On or Flashing | P. 97 |
| Low Oil Pressure Indicator..... | P. 97 |
| PGM-FI (Programmed Fuel Injection) | |
| Malfunction Indicator Lamp (MIL) | P. 97 |
| ABS (Anti-lock Brake System) Indicator | P. 98 |

| | |
|---|---------------|
| If the “-” Indicator is Blinking in the Gear Position Window While Riding..... | P. 99 |
| Other Warning Indication | P. 100 |
| Fuel Gauge Failure Indication | P. 100 |
| Tyre Puncture | P. 101 |
| Electrical Trouble | P. 109 |
| Battery Goes Dead | P. 109 |
| Burned-out Light Bulb..... | P. 109 |
| Blown Fuse | P. 113 |