

Ref. No.	Description	Function
7	Neutral indicator (green)	Lights when transmission is in neutral.
8	Right turn signal indicator (amber)	Flashes when right turn signal operates.
9	Coolant temperature gauge	Shows coolant temperature. See page 14.
10	Tachometer	Shows engine rpm.
11	Tachometer red zone	<p>Do not operate engine in red zone when avoidable. NEVER operate beyond red zone.</p> <p>CAUTION</p> <p>* <i>Exceeding recommended maximum engine rpm may cause serious engine damage.</i></p>
12	Tripmeter reset knob	Resets tripmeter to zero (0). Turn knob in direction shown.