

FREQUENCY		WHICHEVER COMES FIRST ↓	ODOMETER READING [NOTE (3)]							Refer to
			600 mi (1,000 km)	3,600 mi (6,000 km)	7,200 mi (12,000 km)	10,800 mi (18,000 km)	14,400 mi (24,000 km)	18,000 mi (30,000 km)	21,600 mi (36,000 km)	
ITEM		EVERY								
*	DRIVE SHAFT JOINT				L		L		L	
*	FINAL DRIVE LUBRICANT				I		I		R	
	BATTERY	MONTH	I	I	I	I	I	I	I	Pages 57-58
	BRAKE FLUID LEVEL	MONTH	I	I	I	I	I	I	I	Page 53
*	BRAKE FLUID	2 YEARS							R	
	BRAKE SHOE/PAD WEAR			I	I	I	I	I	I	Pages 54-55
	BRAKE SYSTEM		I		I		I		I	Pages 54-55
*	BRAKE LIGHT SWITCH		I		I		I		I	
*	HEADLIGHT AIM		I		I		I		I	
	CLUTCH FREE PLAY		I	I	I	I	I	I	I	Page 52
	SIDE STAND				I		I		I	Page 56
*	SUSPENSION		I		I		I		I	
*	NUTS, BOLTS, FASTENERS		I		I		I		I	
**	WHEELS		I		I		I		I	
**	STEERING HEAD BEARING		I		I		I		I	

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND IS MECHANICALLY QUALIFIED.

- NOTES: (1) More frequent service may be required when riding in rain, or at full throttle. This item is only for U.S.A. model.
 (2) More frequent service may be required when riding in dusty areas.
 (3) For higher odometer readings, repeat at the frequency interval established here.