


3. Apply the brake several times and check for free wheel rotation after the brake lever is released.

NOTE:

- * Make sure the cut-out on the adjusting nut is seated on the brake arm pin (3) after making final free play adjustment.
- * If proper adjustment cannot be obtained by this method see your Honda dealer.

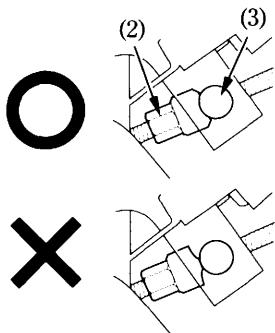

- (2) Adjusting nut
(3) Arm pin

Other Checks:

Make sure the brake arm, spring and fasteners are in good condition.