

REAR BRAKE LOCK

Be sure the rear brake lock is applied while warming up the engine.

To apply the brake lock:

1. While pushing the brake lock pin (1) in, pull in the rear brake lever (2).
2. Set the rear brake lock lever (3) by pushing the rear brake lock lever forward and squeezing the rear brake lever.

NOTE:

* The rear brake lock will not be applied if the rear brake and brake lock cable are not adjusted properly.

If you need adjustment for brake lock cable, see your authorized Honda dealer.



To release the brake lock:

1. Unlock the brake lock lever by squeezing the rear brake lever.
2. Release the rear brake lever.



CAUTION:

* **Before riding, make sure that the rear brake is released fully and does not drag.**

To apply

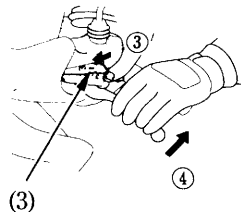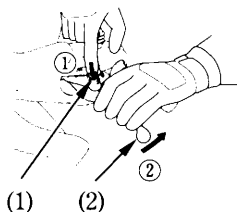

To release

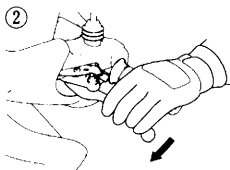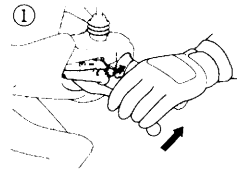

- (1) Brake lock pin
(2) Rear brake lever

- (3) Brake lock lever