


License Light Bulb

1. Remove the rear cover (page 67).
2. Remove the license light cover (1) by removing the two screw (2).
3. Pull out the bulb (3) without turning.
4. Install a new bulb in the reverse order of removal.

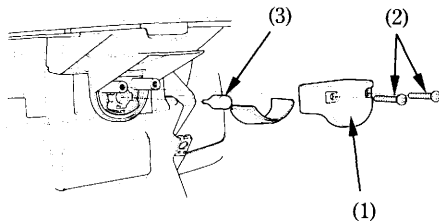

(1) License light cover
(2) Screws

(3) Bulb