

(Ref.No.) Description	Function
(13) PGM-FI malfunction indicator lamp (MIL) (red)	Flashes when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and engine stop switch is at ○ (RUN). If it comes on at any other time, reduce speed and take the motorcycle to your Honda dealer as soon as possible.
(14) Parking brake indicator (red)	Lights when the parking brake is applied.
(15) Anti-lock brake system (ABS) indicator (red) (FJS600A)	This light normally comes on when the ignition is turned ON, and goes off after you ride the scooter at speed above 10 km/h (6 mph). If there is a problem with the Anti-lock Brake System, this light comes on and remains on (see page 30).