

RIGHT COMPARTMENT

There is right compartment (1) below the right side of the handlebar.

The maximum allowable load in the right compartment shall be no more than 0.5 kg (1.1 lbs).

Do not open the right compartment while riding the scooter.

To open:

- Push the rear end of the right compartment cover (2).



To remove:

1. Open the right compartment cover.
2. Remove the screw (3).
3. Pry up on the edge of the right compartment (1) to release the right, left and rear hooks (4) as shown.
4. Close the right compartment cover.
5. Pull up the right compartment.

Make sure the right compartment cover is closed before riding.

When washing your scooter be careful not to flood this area with water.

Do not store valuables or fragile articles in the right compartment.

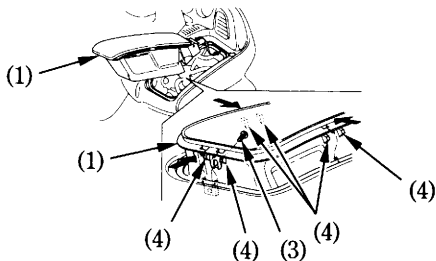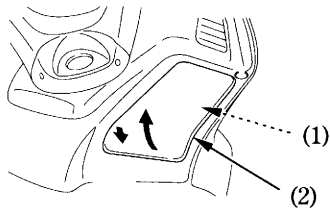

- | | |
|-----------------------------|-----------|
| (1) Right compartment | (3) Screw |
| (2) Right compartment cover | (4) Hooks |