


### Main Fuse A:

The main fuse A (1) is located behind the left side cover.

The specified fuse is:


**30A**

1. Remove the screws A (2) and rear cover (3).
2. Open the seat (page 56 ).

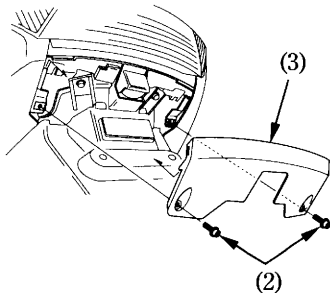

- (2) Screws A  
(3) Rear cover

3. Remove the screws B (4) and the screw C (5).

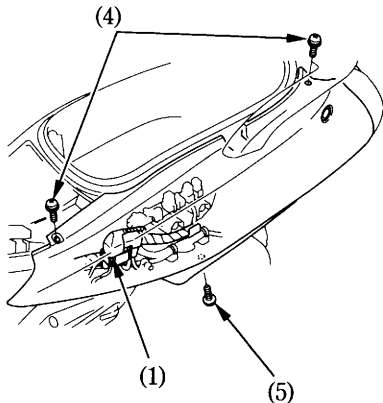

- (1) Main fuse A  
(4) Screws B  
(5) Screw C