
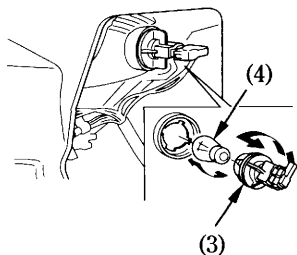


Rear Turn Signal Bulb

1. Open the seat (page 56).
2. Remove the bulb maintenance lid (1) while pushing down the hooks (2).
3. Turn the socket (3) approximately 45° counterclockwise, then pull it out toward you.
4. Slightly press down on the bulb (4) and turn it counterclockwise.
5. Install a new bulb in the reverse order of removal.
 - Use only the amber bulb.

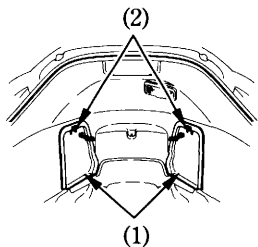

(1) Bulb maintenance lid
(2) Hooks

(3) Socket
(4) Bulb