


Perform the oil change in the following manner. Drain the oil while the engine is still warm.

1. Remove the oil filler cap (4).
2. Place an empty oil drain pan under the crankcase and then remove the drain plug (5). Also remove the oil filter bolt (6) and filter element.

NOTE: The coolant and oil drain plugs are both located on the front engine cover. Ensure that the correct bolt is released. Oil plug 17mm, coolant plug 14mm.

3. Operate the kick starter several times to aid in complete draining of the remaining oil.

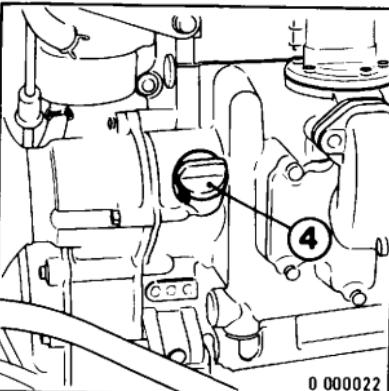

Efectue el cambio de aceite en la siguiente manera. Drene el aceite mientras que el motor esté todavía caliente.

1. Quite la tapa de la boca de suministro de aceite (4).
2. Coloque un receptáculo vacío debajo del cárter, y quite el tampón de drenaje (5). Tambien quite el tornillo (6) del filtro de aceite así como el elemento del filtro.
3. Haga jugar el pedal del kickstarter varias veces para purgar completamente el resto del aceite.

