


When the switch is moved within range **W** in the figure, the turn signal flashes. When the switch is moved beyond the range, the light flashes and warning buzzer sounds. This buzzer is provided to tell the rider that the light is still flashing after a turn is completed.

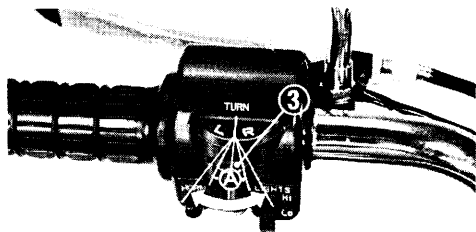


3. Turn signal switch

## Steering Lock

The steering is locked when the ignition switch **1** is in the "LOCK" position. Turn the handlebar all the way to the steering stop, either left or right. With the key at the "OFF" position, turn it counterclockwise to "LOCK" position while pushing in and remove the key. This locks the steering to help prevent theft. To unlock, only turn the key clockwise.

**WARNING:** Do not attempt to turn the key to the "LOCK" position while the motorcycle is in motion.

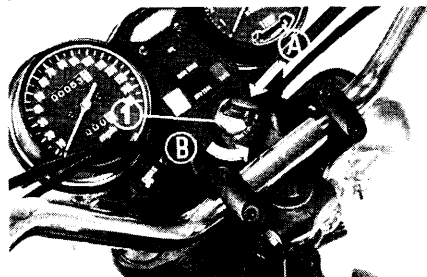

1. Ignition switch    A Push in    B Turn off