

MAINTENANCE SCHEDULE	INITIAL SERVICE PERIOD	REGULAR SERVICE PERIOD Perform at indicated mileage interval.			
	500 miles	3,000 miles	6,000 miles	12,000 miles	24,000 miles
BRAKE FLUID					R
BRAKE HOSES, LINES, AND CONNECTIONS	I	I			
*BRAKE PADS			I		
*WHEEL RIMS AND SPOKES - Tighten spokes and true wheels	I		I		
TIRES	I	I			
FRONT FORK OIL	** R				R
FINAL DRIVE GEAR OIL			I		R
*DRIVE SHAFT, JOINTS - Grease, check for looseness			I		
FRONT AND REAR SUSPENSIONS Operation.	I		I		
*STEERING HEAD BEARINGS				I	
*SIDE STAND		I			
BATTERY ELECTROLYTE LEVEL	I	I			
LIGHTING EQUIPMENT	I		I		
ALL NUTS, BOLTS, AND OTHER FASTENERS - Tightness	I		I		

Items marked * should be serviced by an authorized Honda dealer, unless the owner has proper tools and is mechanically proficient. Other maintenance items are simple to perform and may be serviced by the owner.

** Initial service period 1,000 miles.