

3. Clean the air cleaner element by tapping it lightly to loosen dust. The remaining dust can be brushed from the outer element surface or blown away by applying compressed air from the inside of the element.
4. To reinstall the air cleaner, reverse the removal procedure.


Throttle Grip Play Adjustment

Standard throttle grip play is approximately 10~15° of the grip rotation. This play can be attained by adjustment of the grip play adjuster 2.

Loosen the grip play adjuster lock nut 1 and turn the adjuster in either direction to obtain the grip free play rotation of 10~15°. Retighten the lock nut.



3 Air cleaner element

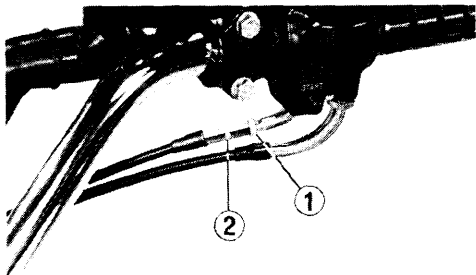

1 Grip play adjuster lock nut
2 Grip play adjuster