

Brake pads:


Brake pad wear will depend upon the severity of usage, type of driving, and condition of the roads. It may be expected that the pads will wear faster on dirty and wet roads. Inspect the pads visually at all regular service intervals to determine the pad wear.

FRONT.....Remove the inspection window cap (4). If any pad is worn to the red


line (2), replace all front pads as a set.

REAR.....Open the inspection window cap (7) and if either of the right or left red mark (5) is within the red zone (6), replace both pads as a set.

***NOTE:** Use only genuine Honda replacement friction pads offered by authorized Honda dealers. When brake service is necessary, consult your Honda dealer.*

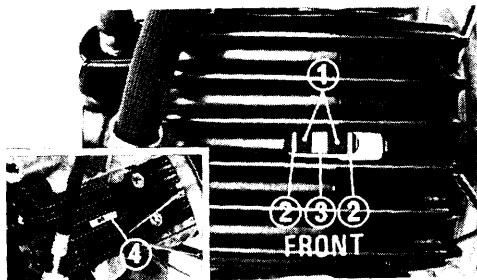

- 1 Brake pads
- 2 Red lines
- 3 Brake disc
- 4 Inspection window cap

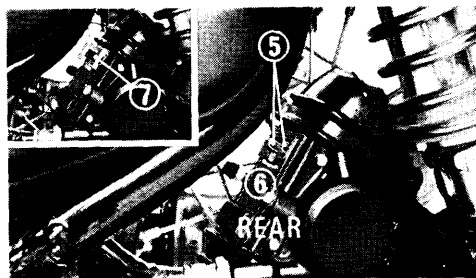

- 5 Red marks
- 6 Red zone
- 7 Inspection window cap