

Battery charging:

Should the battery electrolyte specific gravity reading (measured with a hydrometer) drop below 1.200 (@ 68°F (20°C)), the battery should be charged at a rate not to exceed 2 amps until the specific gravity reading is between 1.260 and 1.280 (@ 68°F (20°C)).

WARNING: Charge the battery in a well-ventilated area. Remove the filler caps and make sure the charger is connected properly to the battery before charging.

Frequent discharging or a partially discharged battery condition is sometimes the result of improper starting procedure, poor engine condition and/or electrical system problems. To locate and correct the cause of this condition, we suggest you contact your Honda dealer.

When storing the motorcycle the battery negative (-) cable should be disconnected or the battery removed and stored in a cool place. The battery should be charged at least once a month during the storage period to preserve battery life.