


Coolant change:

WARNING:

- *Do not perform this operation while the engine is hot.*
- *Do not spill coolant on painted surfaces.*


1. Take out the reserve tank from the bracket and drain the coolant from it through the filler cap opening.

CAUTION: *If the radiator cap is first removed, the coolant will flow out of the radiator filler opening as the reserve tank is higher than the radiator.*

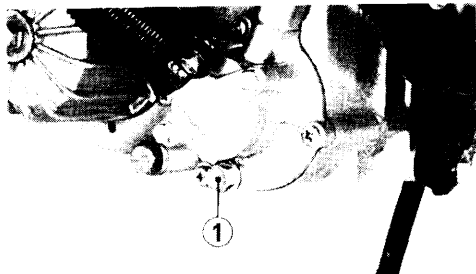

① Radiator drain plug

2. Remove the drain plug ① from the lower front of the engine.
3. Remove the radiator cap ②.
4. After the coolant has been drained, reinstall the drain plug securely.
5. Fill the radiator slowly with the recommended coolant through the filler neck.
Cooling system capacity: 3.2l. (3.4 U.S. qt.)
6. Run the engine at idle speed after refilling to remove air from the cooling system.
7. When the air is bled from the system, the coolant level will drop slightly. Additional coolant should be added.
8. Replace the radiator cap tightly.
9. Fill the reserve tank to the "FULL" mark.

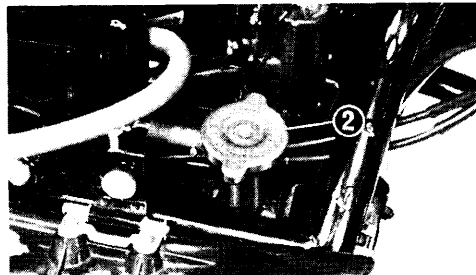

② Radiator cap