



## Headlight Bulb Replacement

- a. Remove the mounting screws (2) and the beam adjusting screw (1).
- b. Remove the upper and lower retaining lock pins (3) and screws (4) from the rim.
- c. Remove the two sealed beam unit

- retaining screws (5).
- d. Install a new sealed beam unit. Assemble by reversing the procedure described above.

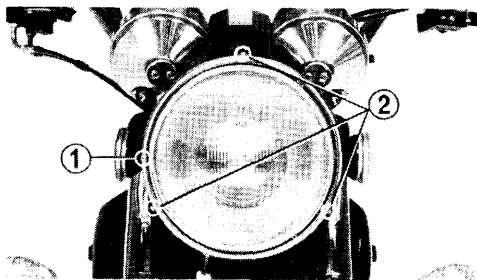

- ① Beam adjusting screw
- ② Mounting screws

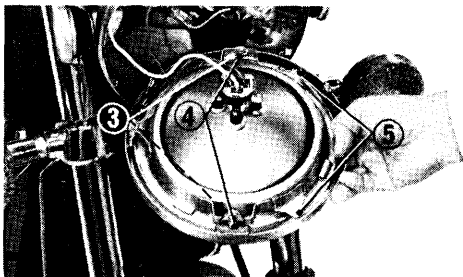

- ③ Lock pins
- ④ Lock screws
- ⑤ Sealed beam unit retaining screws