

MAJOR COMPONENTS

(Information you need to operate this motorcycle)

To supply air pressure from the outlet valve:

1. Turn the ignition switch to the P position.
2. To inflate a tyre, connect an air supply hose to the outlet valve.
3. Push the OUTLET button to supply air pressure. The air pressure will not appear in the display at this time.

CAUTION:

- ***Do not operate the air pump for more than 5 minutes at a time or the pump unit may be damaged.***

